


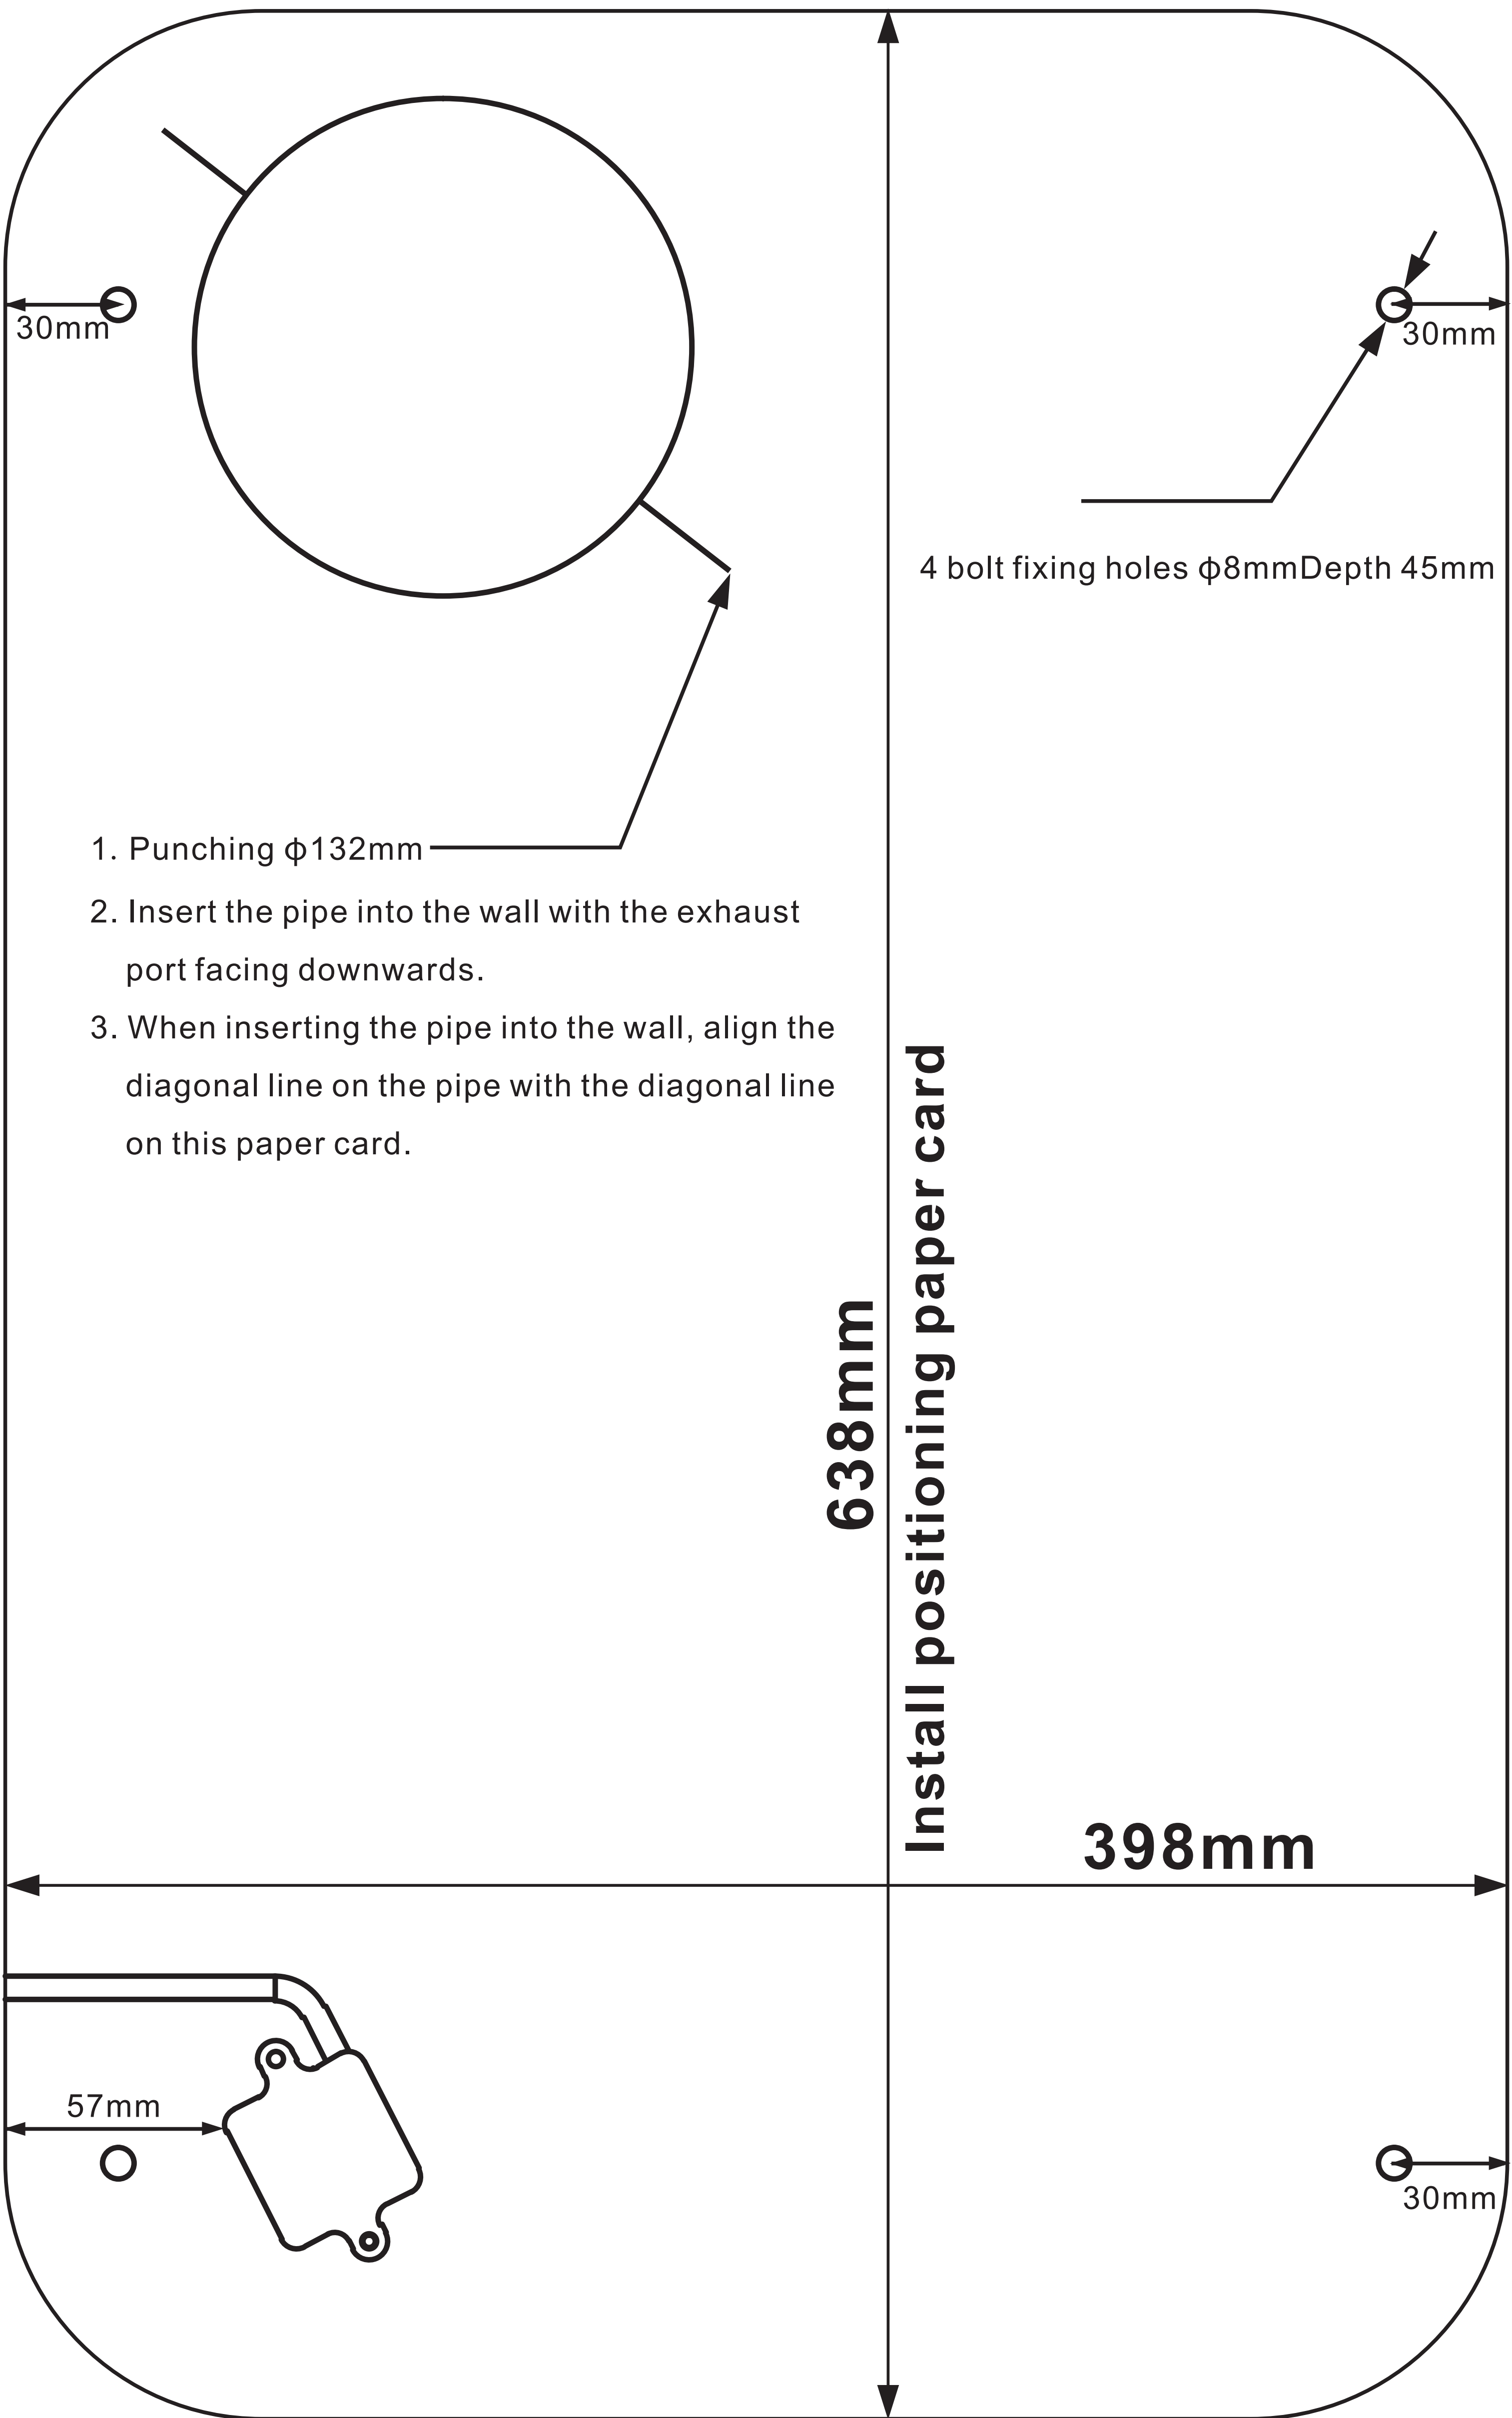

1. Punching $\phi 132\text{mm}$
2. Insert the pipe into the wall with the exhaust port facing downwards.
3. When inserting the pipe into the wall, align the diagonal line on the pipe with the diagonal line on this paper card.

4 bolt fixing holes $\phi 8\text{mm}$ Depth 45mm

638mm
Install positioning paper card
398mm